



VEID ENTERPRISES PTE LTD
1 Goldhill Plaza #03-21
Singapore 308899.

Tel: +65 6599 6805 Fax: +65 6251 1287
Singapore 308899.
Email: sales@veid.net

Part 1 : KOW-PABX1000 Telephone Exchange

Note : All the programming must be performed on the extension 601/602/603/604.

All the programming must be done in programming status.

1. To enter system programming status

***#*0000**

2. Enable/Disable C.O. Lines : You must use these command according to the actual C.O. line connected before you use the PBX. If you don't enable any C.O. line, system will define no C.O. line connected and will not auto detect C.O. line ! Example = Line 1, Line 2, Line 3

(a) Enable All C.O. line

*#*0000 (Enter System Programming Status)

0600#

(b) Disable All C.O. Lines

*#*0000

0610#

(c) Enable no. of M C.O. line; M = 1 – 3

*#*0000

060M#

(d) Disable no. of M C.O. line; M = 1 – 3

*#*0000

061M#

3. Set Operating Mode

- The system can be set to 3 operating modes. When C.O. line incoming call, there is 3 modes : operator work mode, auto-attendant work mode, system CRBT mode.

Note : On default, all the C.O. lines are in operator mode. **The operator ringing extension is 601 and 602.**



VEID ENTERPRISES PTE LTD
1 Goldhill Plaza #03-21
Singapore 308899.

Tel: +65 6599 6805 Fax: +65 6251 1287
Singapore 308899.
Email: sales@veid.net

(a) Set Operator Mode for Certain C.O. Line

*#*0000

11M#

4. Set Operator Ringing Extension

Operator ringing extension (also called operator work extension) is different with auto-attendant work extension (default 602), the default are Ext. 601 and 602.

(a) Set Ringing Extensions in Day mode

In operator work mode when incoming call from no. M C.O. line arrives and system in day mode (in default setting system in day mode), no. N ext. will ring. In default setting, Ext 601, 602 will ring.

*#*0000

30MN0# where M = C.O. line port no. M = 1 – 3

N = Ext. port no. N = 1 -8 (where N = 1 means Ext. 601.... N = 8 means Ext.608)

(eg) Set Ext. 605, Ext. 607 and Ext. 608 ring when call from C.O. line 2 arrives while the system in day mode, then input 302#, 302050#, 302070#, 302080#.


 Line 2 Extension

5. Set Direct-Dialling-Out Mode for All Extensions

- Set Direct-Dialling-Out mode for all extension (Dial outgoing number directly).

*#*0000

20#

6. Set/Change Extension Number

- Change old extension number to new extension number “abcd”.

*#*0000

9Nabcd#

Where N : the extension port number, N = 1 to 8,



VEID ENTERPRISES PTE LTD
1 Goldhill Plaza #03-21
Singapore 308899.

Tel: +65 6599 6805 Fax: +65 6251 1287
Singapore 308899.
Email: sales@veid.net

abcd : the new extension number, 1 to 4 digit.

(g) 91101#, 92102#, 93103#, 94104#, 95105#, 96106#, 97107#, 98108#

